















Nothing but **HEAVY DUTY.**[®]








M18 FHAC0745

Original instructions

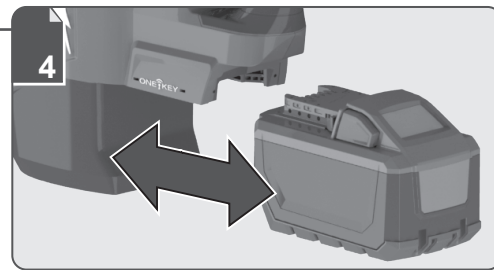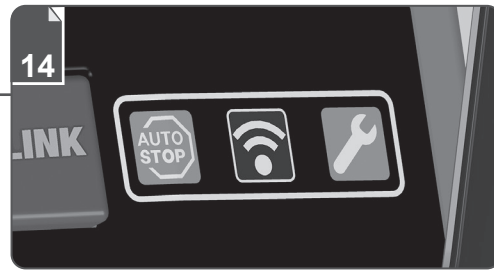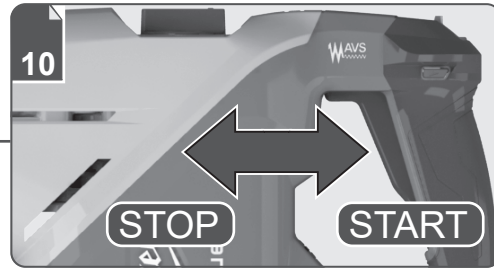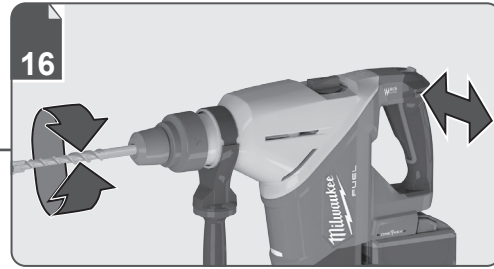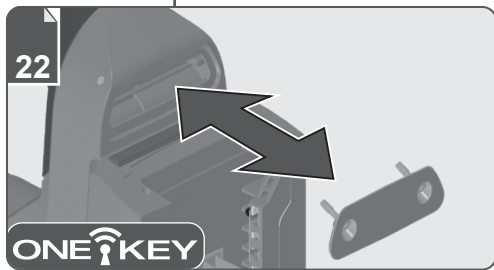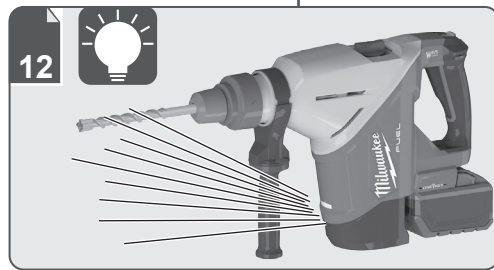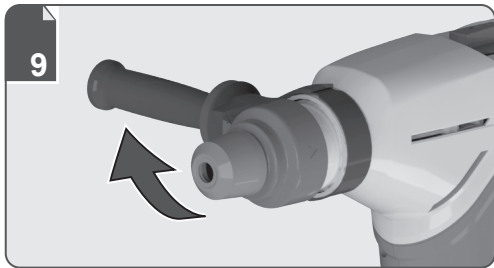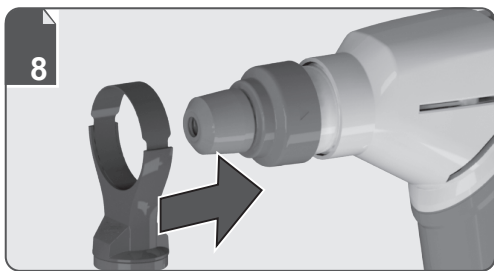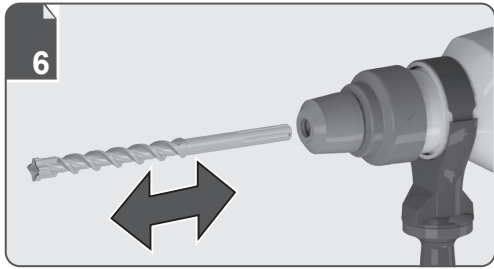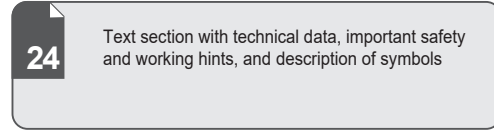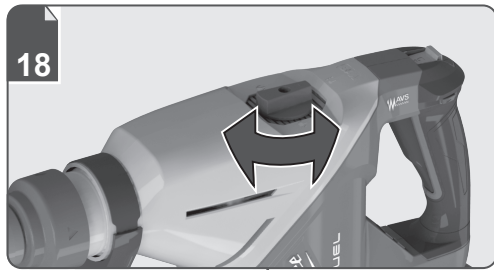

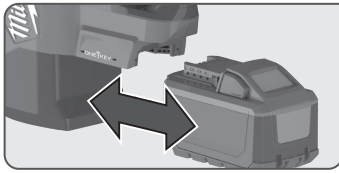

Remove the battery pack before starting any work on the product.

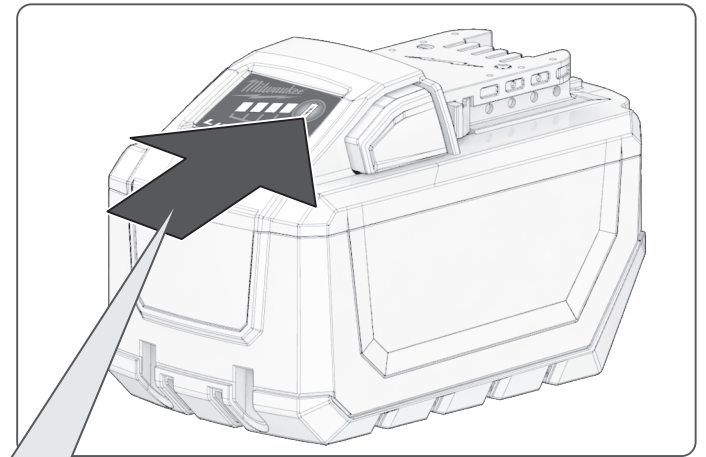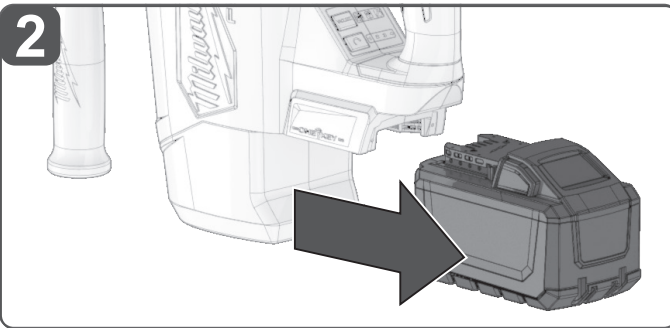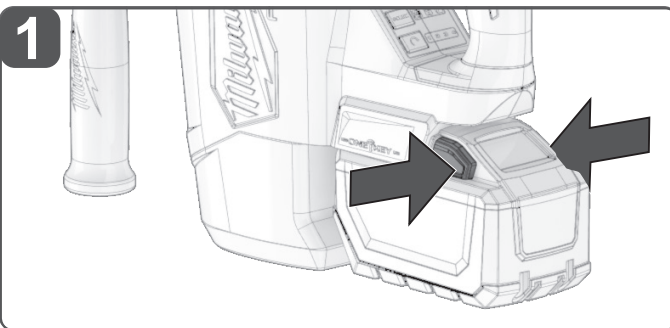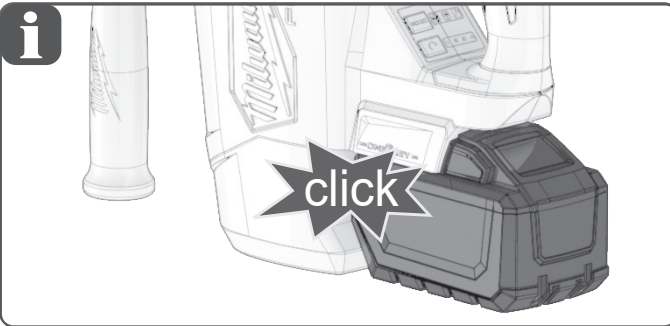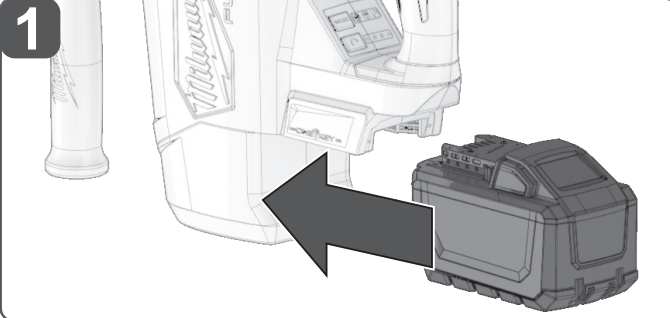

78-100%



55-77%




33-54%






10-32%




< 10%

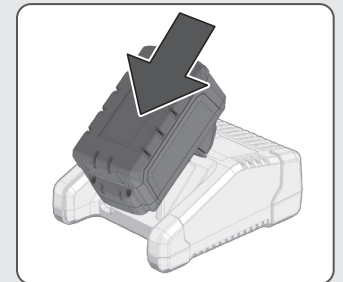

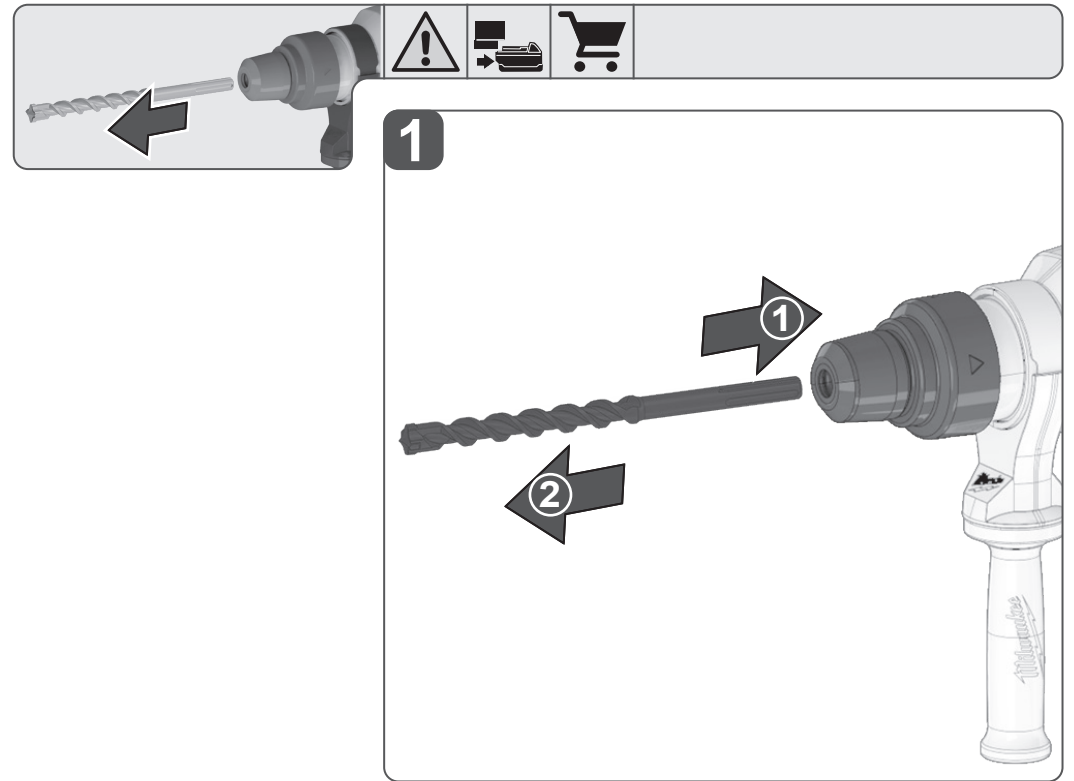
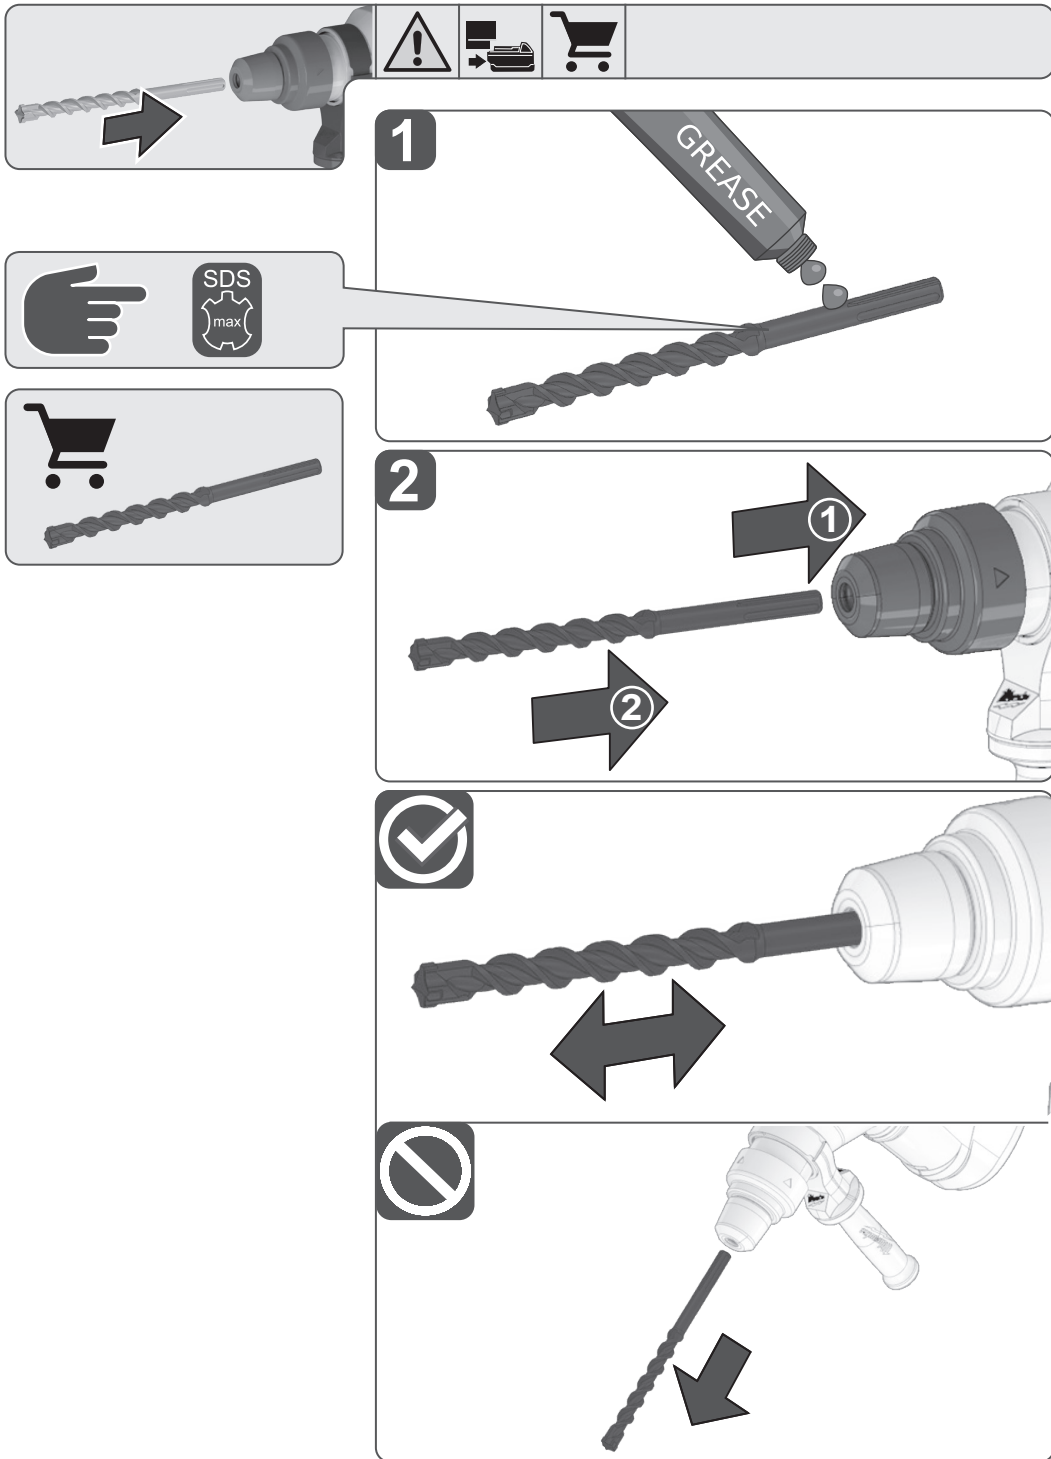


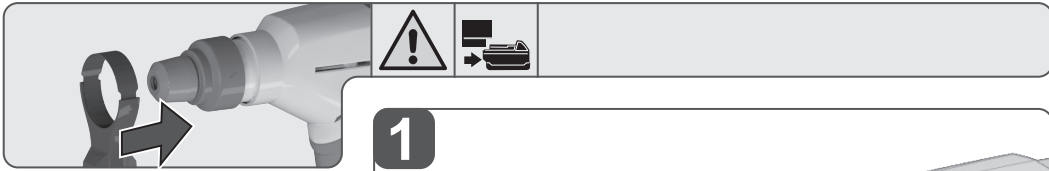


1

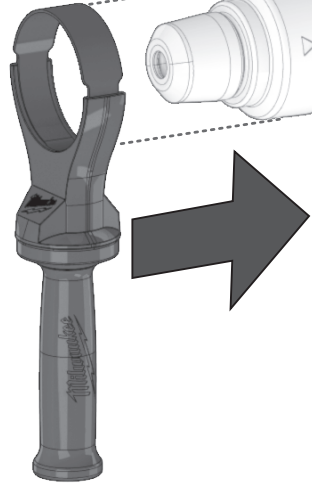


2

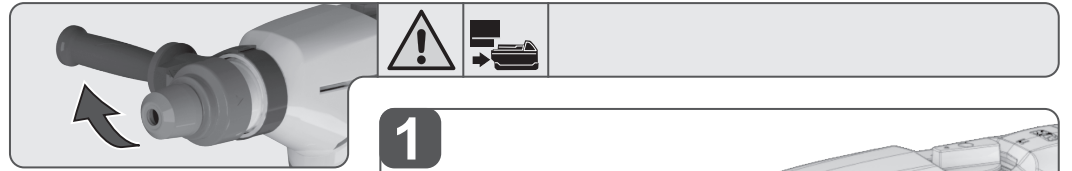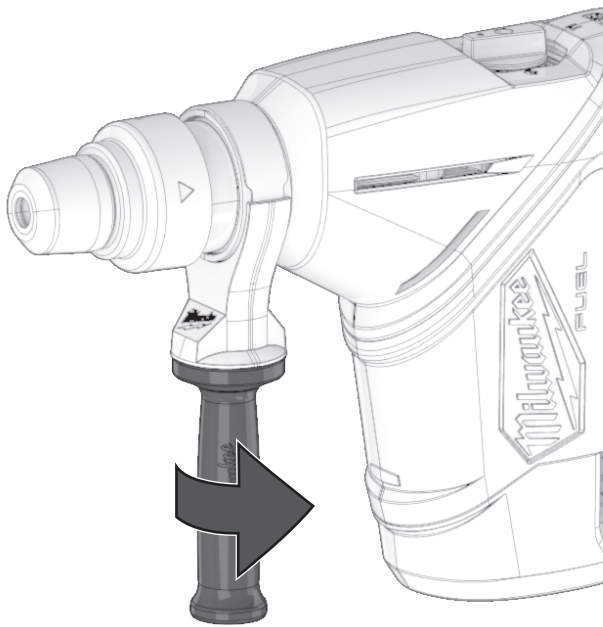


1

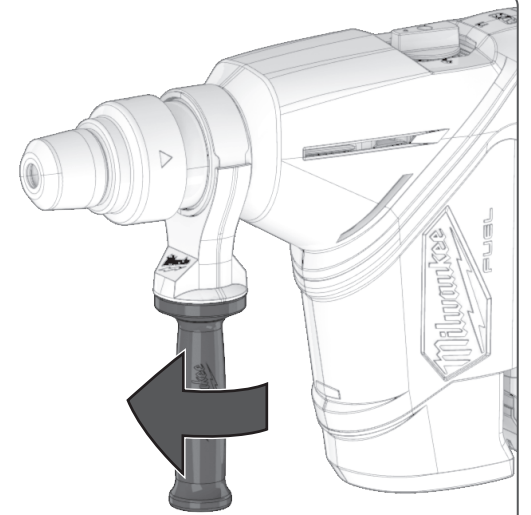


2

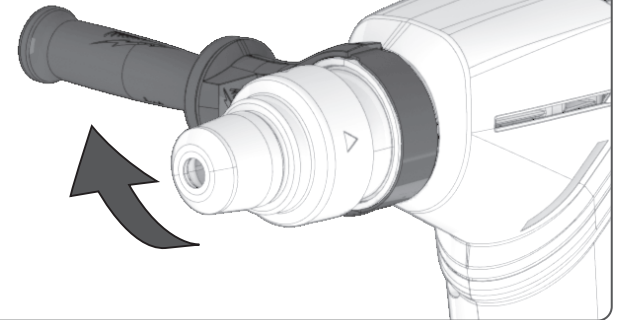


3


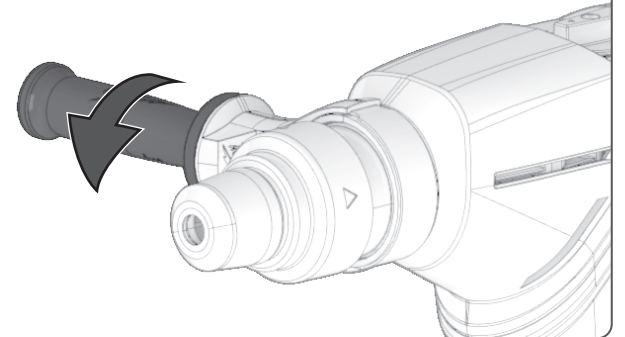


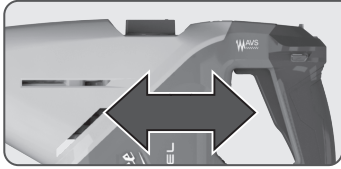




START

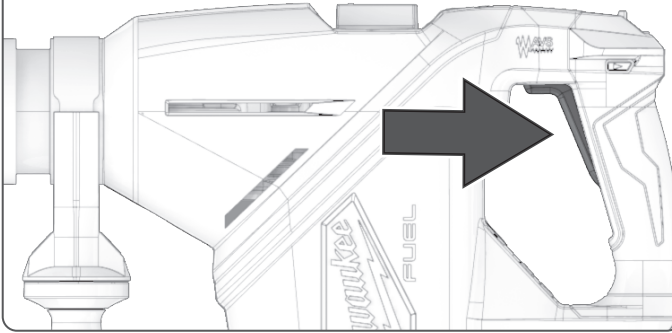



STOP





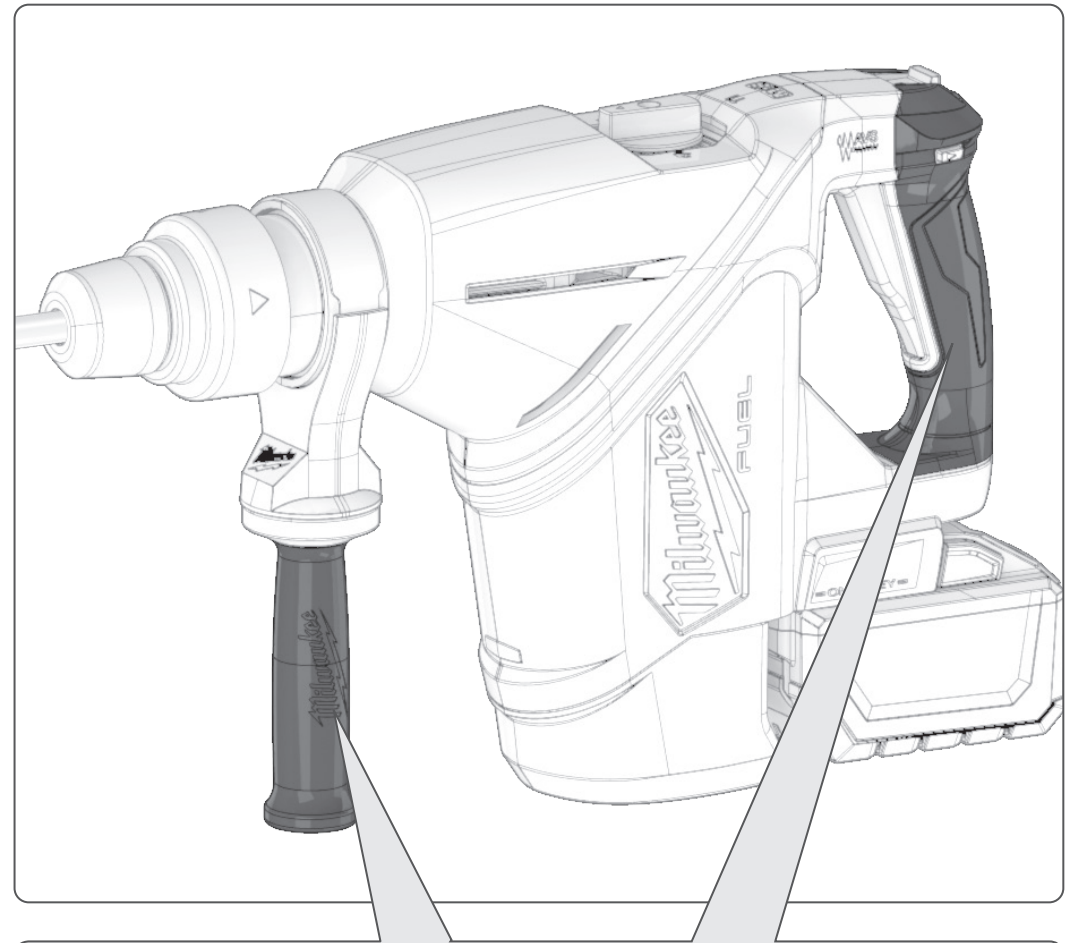
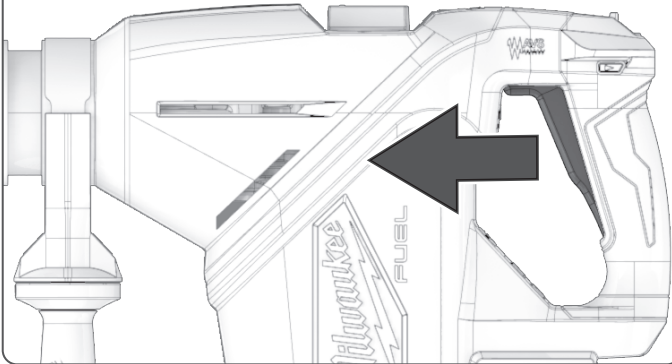


Insulated gripping surface










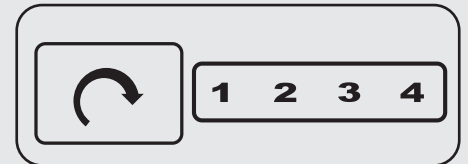
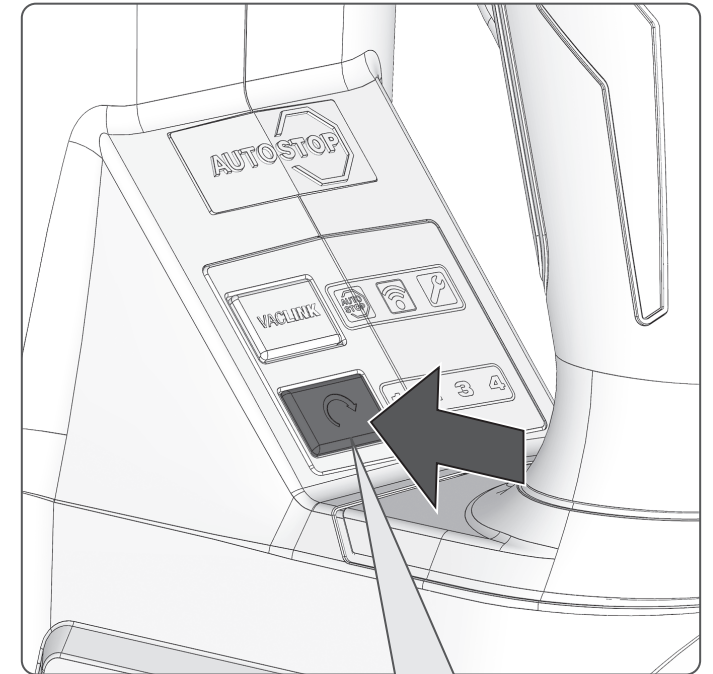
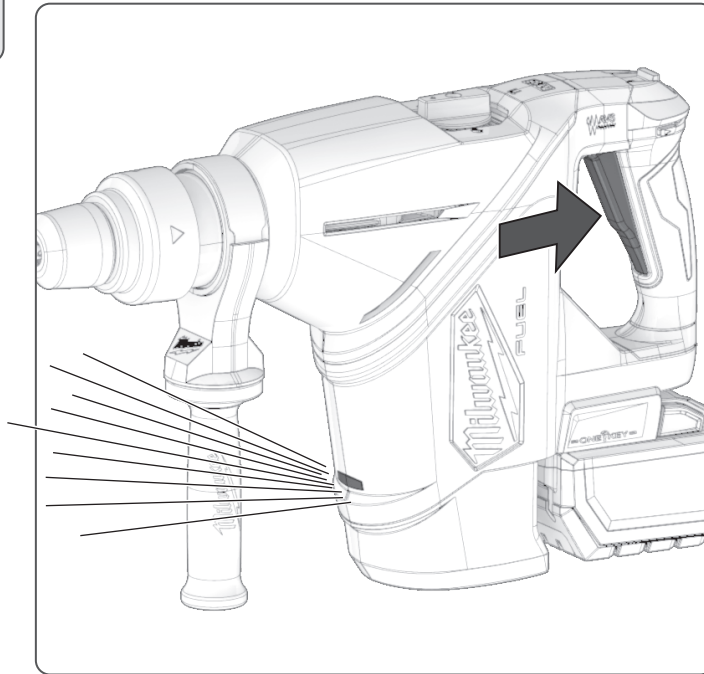







- | | |
|----------|-------------------------|
| 1 | 0–175 min ⁻¹ |
| 2 | 0–245 min ⁻¹ |
| 3 | 0–300 min ⁻¹ |
| 4 | 0–347 min ⁻¹ |





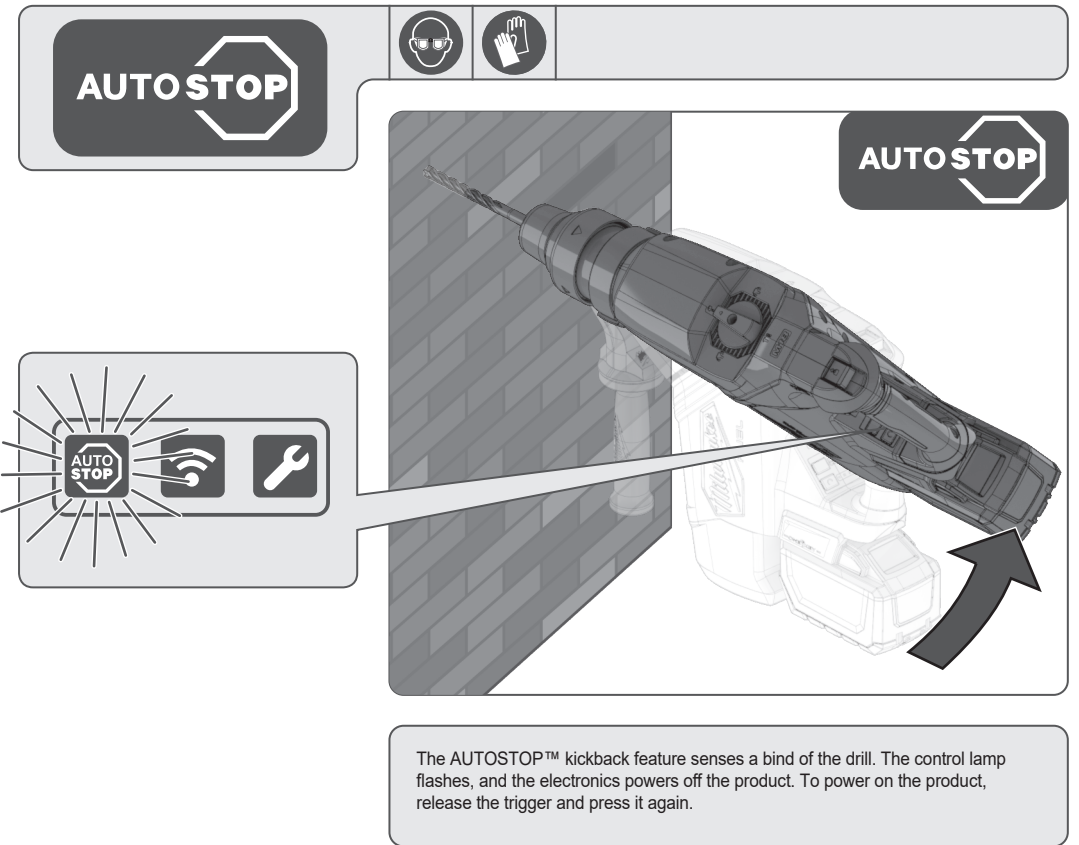
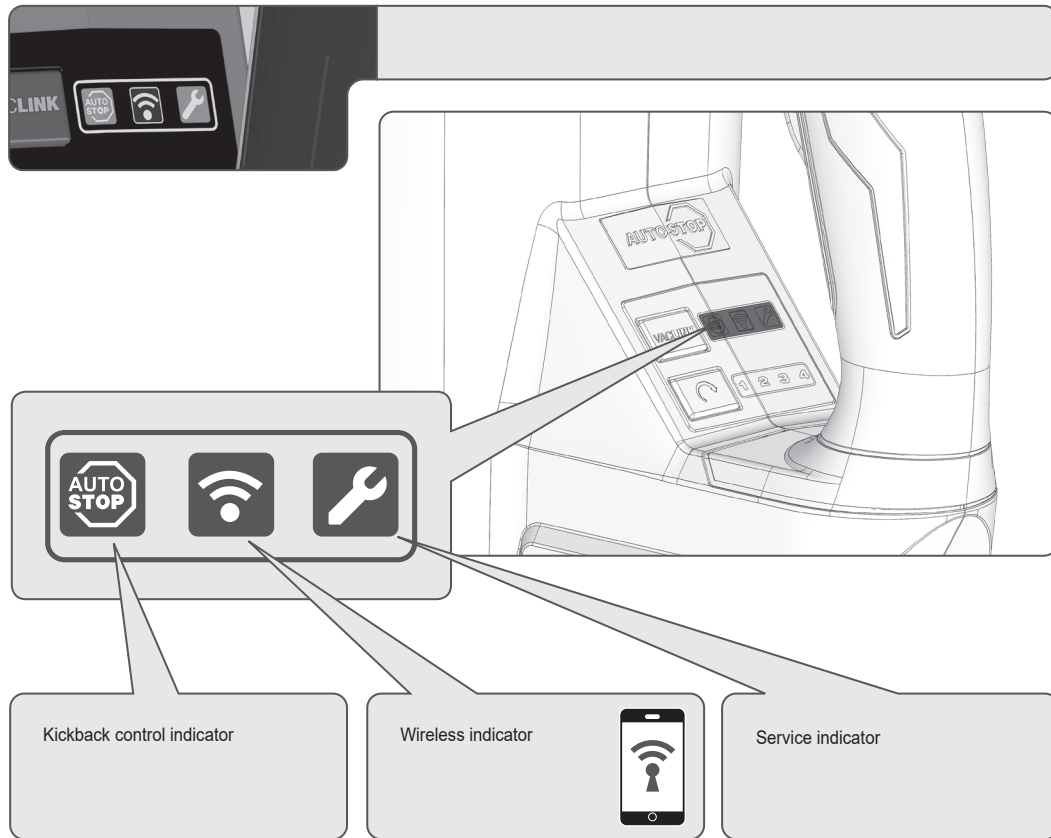


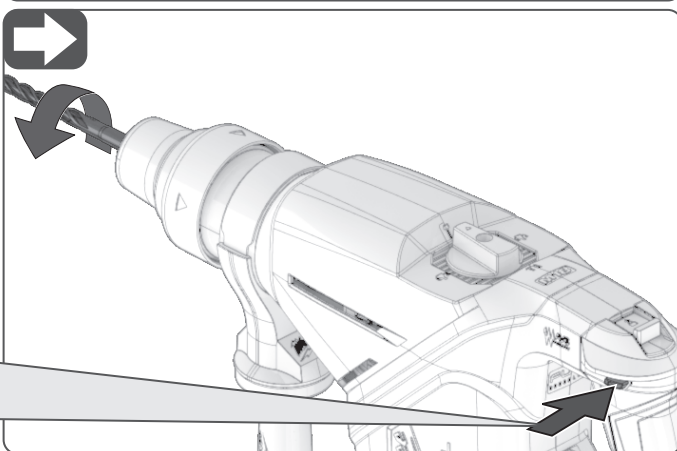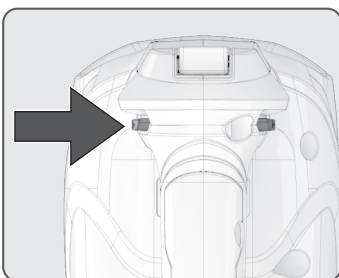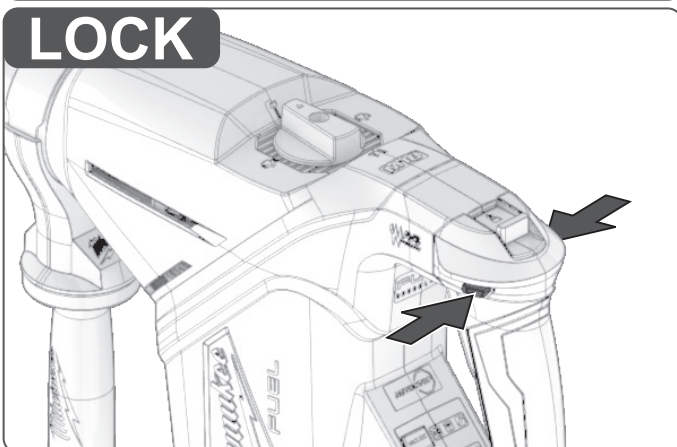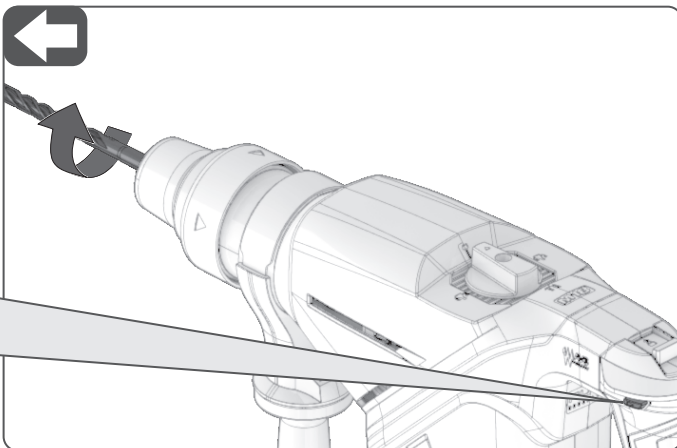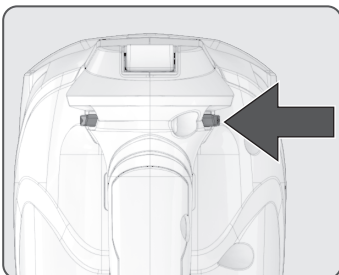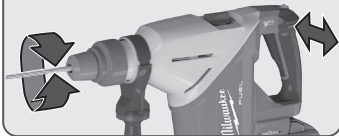

 Operate the forward or reverse switch only after the product comes to a complete stop.

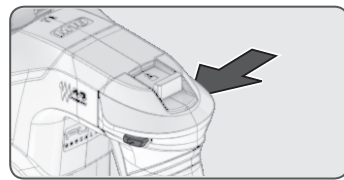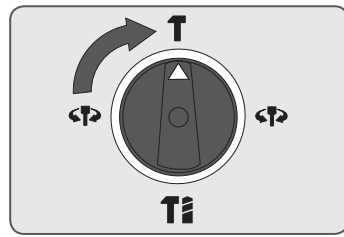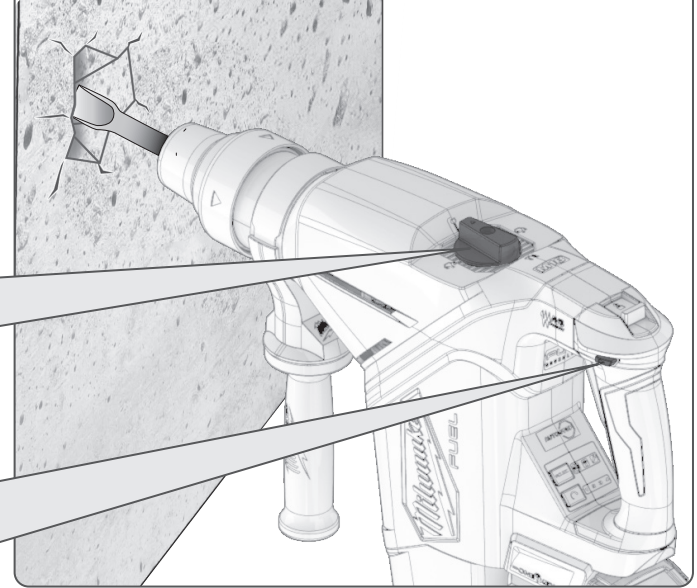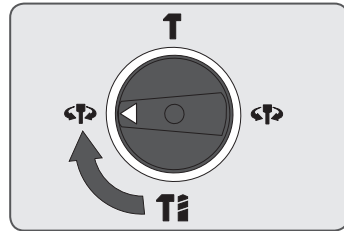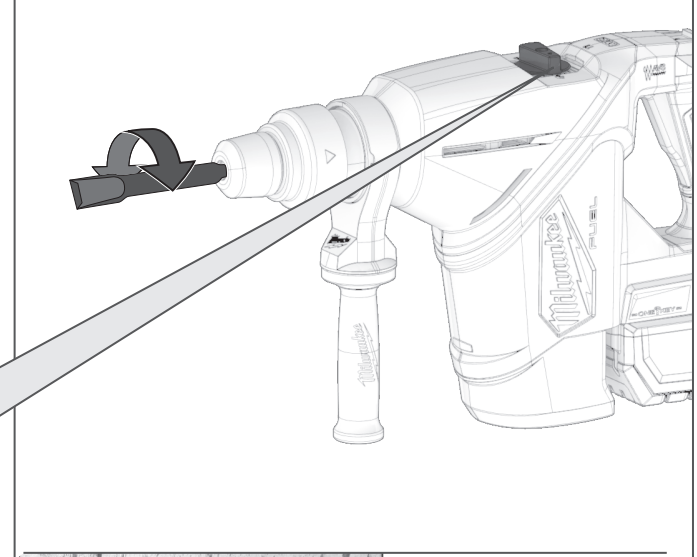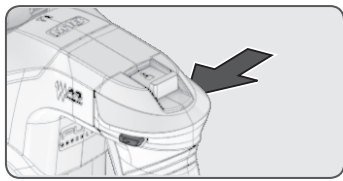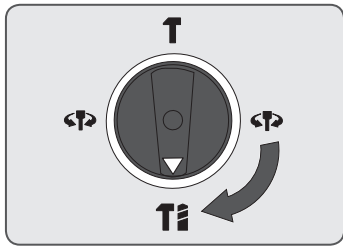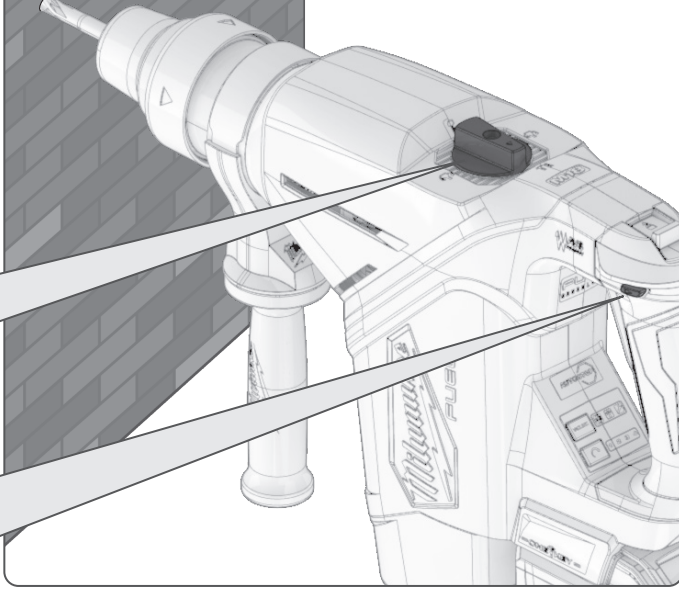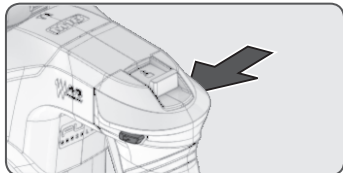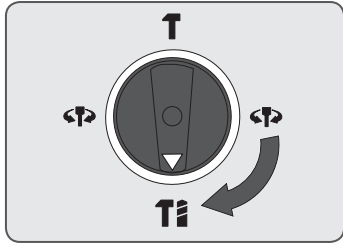
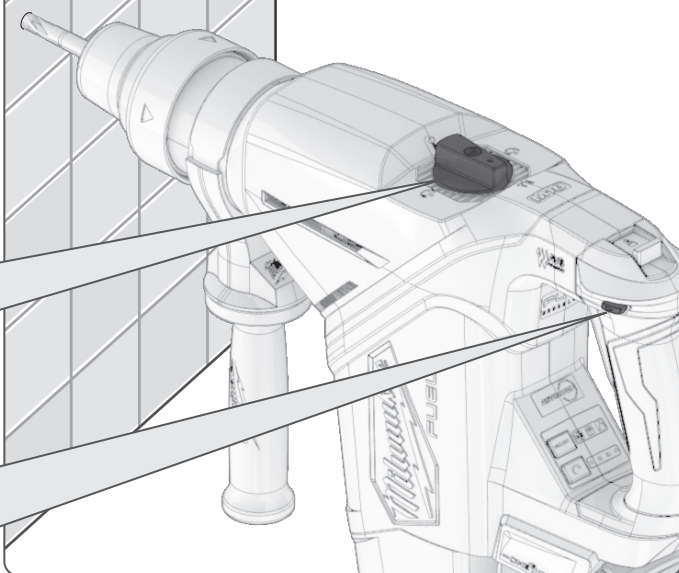
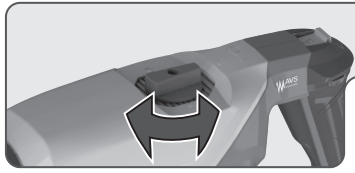


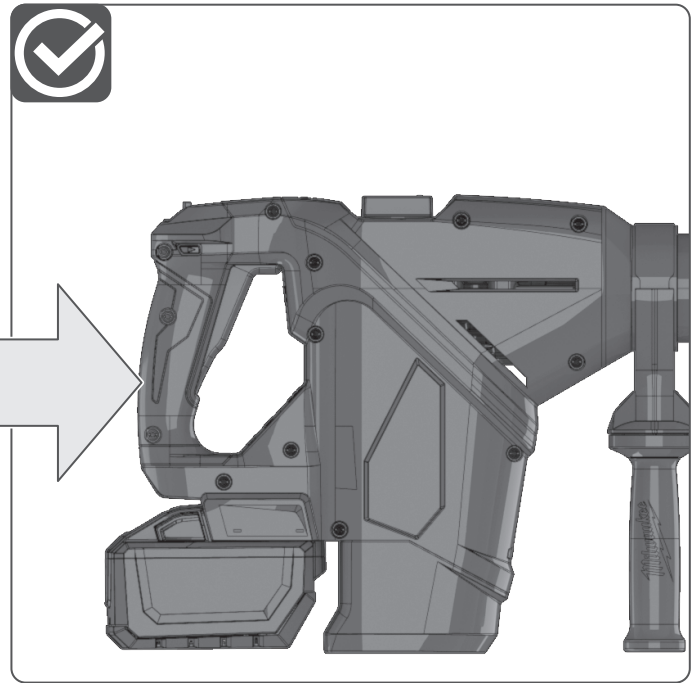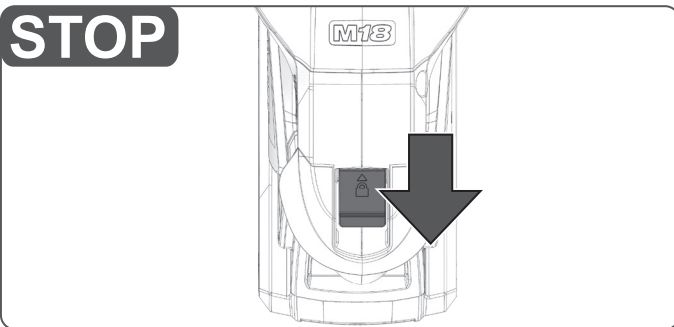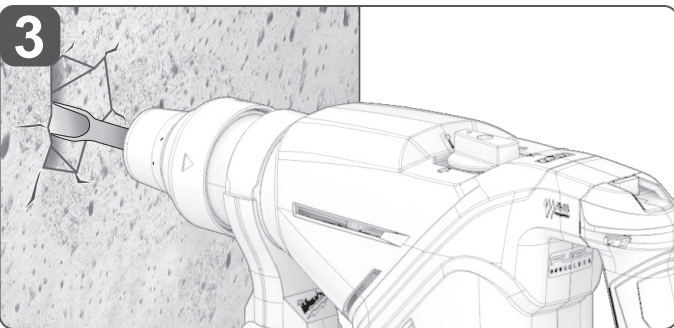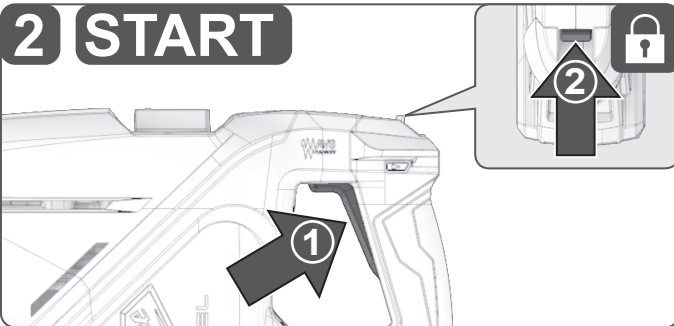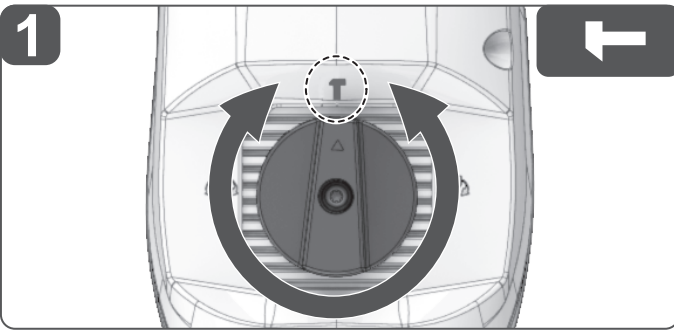

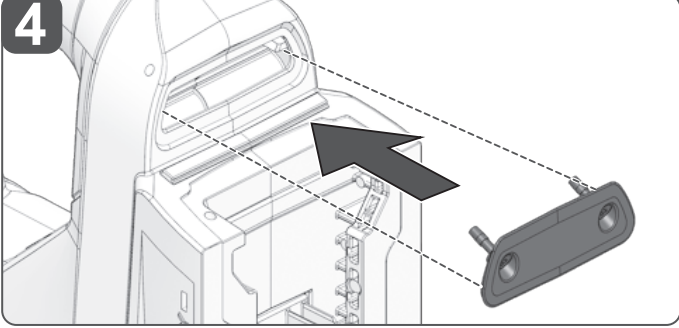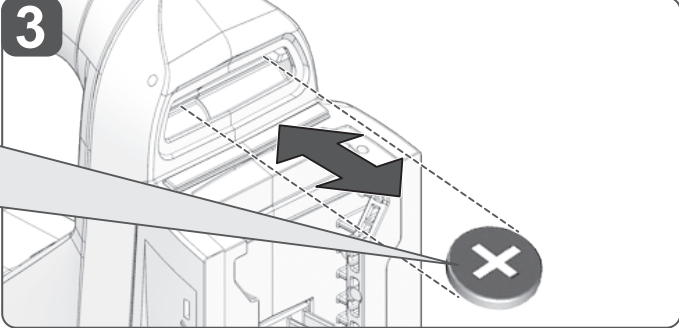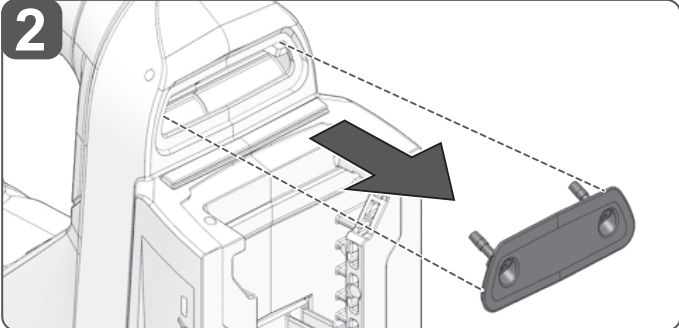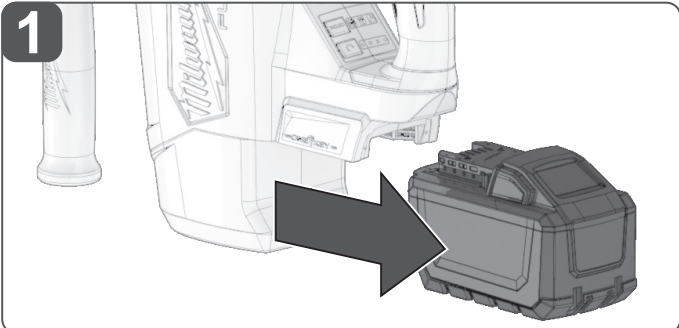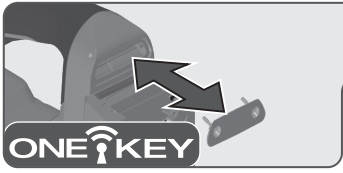

3V CR2032
Coin cell

VACLINK™

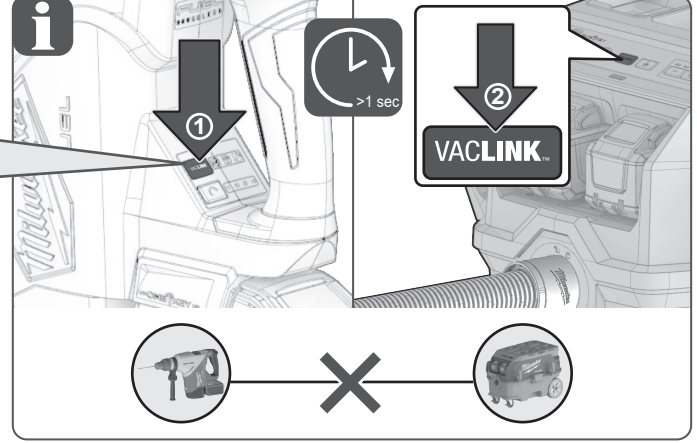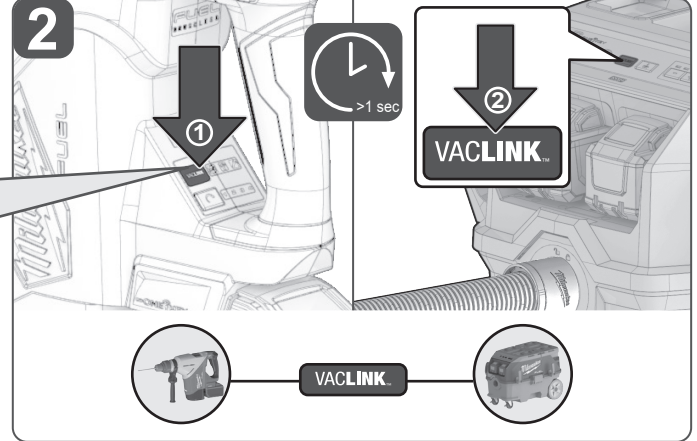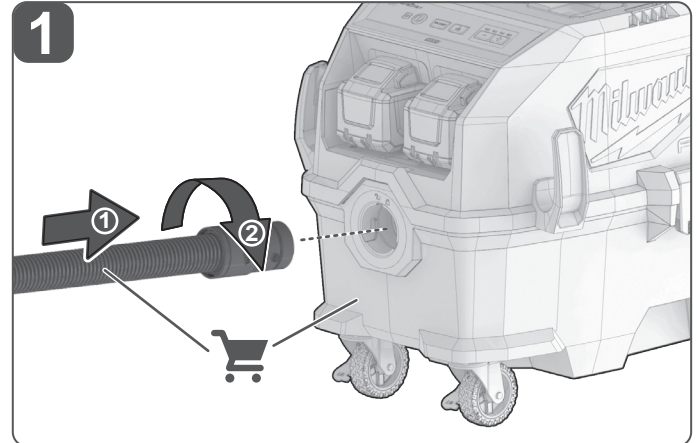

VACLINK™

↓

VACLINK™

VACLINK™

↓

VACLINK™

TECHNICAL DATA

M18 FHACO745

Type	Cordless Rotary Hammer
Production code	5095 15 01 XXXXXX MJJJJ
Battery voltage	18 V ---
Frequency band(s) of BLUETOOTH	2400–2480 MHz
Radio-frequency power	6.0 dBm
BLUETOOTH version	5.2 BT signal mode
Single impact energy	15.2 J
No-load speed	0–347 min ⁻¹
Rate of percussion under load	0–2625 min ⁻¹
Drilling capacity (SDS-max)	
Concrete	45 mm
Tunnel bit in concrete, bricks, and limestone	65 mm
Core cutter in concrete, bricks, and limestone	150 mm
Weight with battery pack (5.0–12.0 Ah)	9.0–9.7 kg
Recommended ambient operating temperature	-18 ... +50 °C
Recommended battery pack types	M18B..., M18 HB..., M18FB...
Recommended chargers	M12-18..., M1418..., M18...

Noise information: Measured values determined according to EN 62841.

Typically, the A-weighted noise levels of the tool are:

Sound pressure level / Uncertainty <i>K</i>	100 dB(A) / 3 dB(A)
Sound power level / Uncertainty <i>K</i>	108 dB(A) / 3 dB(A)

Always wear ear protectors.

Vibration information: Total vibration values (vector sum in the three axes) determined according to EN 62841.

Vibration emission value a_n / Uncertainty *K*

Hammer drilling in concrete ($a_{n,HD}$)	
with battery pack (M18FB6)	10.6 m/s ² / 1.5 m/s ²
with battery pack (M18FB12)	10.7 m/s ² / 1.5 m/s ²
Chiselling ($a_{n,ChEq}$)	
with battery pack (M18FB6)	10.7 m/s ² / 1.5 m/s ²
with battery pack (M18FB12)	9.0 m/s ² / 1.5 m/s ²

⚠ WARNING!

The vibration and noise emission level given in this information sheet has been measured in accordance with a standardized test given in EN 62841 and may be used to compare one tool with another. It may be used for a preliminary assessment of exposure.

The declared vibration and noise emission level represents the main applications of the tool. However if the tool is used for different applications, with different accessories or poorly maintained, the vibration and noise emission may differ. This may significantly increase the exposure level over the total working period.

An estimation of the level of exposure to vibration and noise should also take into account the times when the tool is switched off or when it is running but not actually doing the job. This may significantly reduce the exposure level over the total working period.

Identify additional safety measures to protect the operator from the effects of vibration and/or noise such as: maintain the tool and the accessories, keep the hands warm, organization of work patterns.

⚠ WARNING! Read all safety warnings, instructions, illustrations and specifications provided with this power tool. Failure to follow all instructions listed below may result in electric shock, fire, and/or serious injury.

Save all warnings and instructions for future reference.

HAMMER SAFETY WARNINGS

Safety instructions for all operations

Wear ear protectors. Exposure to noise can cause hearing loss.

Use auxiliary handle(s), if supplied with the tool. Loss of control can cause personal injury.

Hold the power tool by insulated gripping surfaces, when performing an operation where the cutting accessory may contact hidden wiring. Cutting accessory contacting a "live" wire may make exposed metal parts of the power tool "live" and could give the operator an electric shock.

Safety instructions when using long drill bits with rotary hammers

Always start drilling at low speed and with the bit tip in contact with the workpiece. At higher speeds, the bit is likely to bend if allowed to rotate freely without contacting the workpiece, resulting in personal injury.

Apply pressure only in direct line with the bit and do not apply excessive pressure. Bits can bend, causing breakage or loss of control, resulting in personal injury.

ADDITIONAL SAFETY AND WORKING INSTRUCTIONS

Use personal protective equipment. Always wear eye protection. Protective equipment, such as a dust mask, non-skid safety shoes, hard hat or hearing protection used for appropriate conditions will reduce personal injuries.

The dust produced when using the product may be harmful to health. Do not inhale the dust. Wear a suitable dust protection mask.

Remove the battery pack before starting any work on the product.

Clamp the workpiece with a clamping device. Unclamped workpieces can cause severe injury and damage.

During high-torque operations, always hold the product with two hands to avoid loss of control. If the product is used with a side handle, hold the product by the two handles.

Do not machine any materials that present a danger to health, such as asbestos.

Avoid electric cables, gas pipes, and water pipes when working on walls, ceilings, or floors.

Do not remove chips and splinters while the product is running.

Do not reach into the product while it is running.

Do not insert the bit into the product when the product is running and the trigger is on lock-on status. The bit will spin out of control and may hurt the operator. Make sure that the bit is properly installed before operating the product again.

Do not power on the product again after it has stalled. Powering it on again can cause a kickback with high reaction force. Determine why the product has stalled and rectify it, paying heed to the safety instructions. If necessary, remove the insertion tool.

The possible causes may be:

- The insertion tool is tilted in the workpiece to be machined.
- The insertion tool has pierced through the material to be machined.
- The product is overloaded.

The insertion tool is sharp-edged and can become hot during use.

⚠ WARNING! Danger of cuts and burns:

- when changing insertion tools
- when setting the product down

SPECIFIED CONDITIONS OF USE

The cordless rotary hammer is designed for hammer drilling and chiselling in stone and concrete.

Do not use the product for any other purpose.

RESIDUAL RISKS

Even when the product is used as prescribed, it is still impossible to completely eliminate certain residual risk factors. The following hazards may arise during use and the operator should pay special attention to avoid:

- injury caused by vibration
 - Hold the product by designated handles and restrict working time and exposure.
- hearing injury caused by exposure to noise
 - Wear ear protection and limit exposure.
- injuries due to flying debris
 - Wear eye protection, heavy long trousers, gloves, and substantial footwear at all times.
- health hazards caused by breathing toxic dusts
 - Wear a suitable dust protection mask.

BATTERY SAFETY INSTRUCTIONS

Use of Li-Ion batteries

Do not dispose of used battery packs in the household refuse or by burning them. MILWAUKEE distributors offer to retrieve old batteries to protect our environment.

Do not store the battery pack together with metal objects (short circuit risk).

Use only M18 System chargers for charging M18 System battery packs. Do not use battery packs from other systems.

Never break open battery packs and chargers, and store them only in dry rooms. Keep the battery packs and chargers dry at all times.

Battery acid may leak from damaged batteries under extreme load or extreme temperatures. In case of contact with battery acid, wash it off immediately with soap and water. In case of eye contact, rinse thoroughly for at least 10 minutes and immediately seek medical attention.

No metal parts must be allowed to enter the battery section of the charger (short circuit risk).

Battery packs that have not been used for some time should be recharged before use.

Temperatures in excess of 50 °C (122 °F) reduce the performance of the battery pack. Avoid extended exposure to heat or sunshine (risk of overheating).

The contacts of chargers and battery packs must be kept clean.

For an optimum lifetime, the battery packs have to be fully charged after use.

⚠ WARNING! To reduce the risk of fire, personal injury, and product damage due to a short circuit, never immerse the product, battery pack, or charger in fluid or allow fluid to flow inside them. Corrosive or conductive fluids, such as seawater, certain industrial chemicals, and bleach or bleach-containing products, etc., can cause a short circuit.



WARNING! The product contains a lithium button / coin cell battery. A new or used battery can cause severe internal burns and lead to death in as little as 2 hours if swallowed or if it enters the body. Always secure the battery compartment cover. If it does not close securely, stop using the product, remove the batteries, and keep it out of reach of children. If you think batteries may have been swallowed or entered the body, seek immediate medical attention.

To obtain the longest possible battery life, remove the battery pack from the charger once it is fully charged.

For battery pack storage longer than 30 days:

- Store the battery pack where the temperature is below 27 °C and away from moisture.
- Store the battery packs in a 30%–50% charged condition.
- Every six months of storage, charge the battery pack as normal.

Battery protection for Li-Ion batteries

In extremely high torque, binding, stalling, and short circuit situations that cause high current draw, the product vibrates for about 5 seconds, the fuel gauge flashes, and then the product powers off. To reset, release the trigger.

Under extreme circumstances, the internal temperature of the battery pack could rise too much. If this happens, the fuel gauge flashes until the battery pack cools down. After the lights go off, continue working.

Transport of Li-Ion batteries

Lithium-ion batteries are subject to the Dangerous Goods Legislation requirements.

Transportation of those batteries has to be done in accordance with local, national, and international provisions and regulations.

The user can transport the batteries by road without further requirements.

Commercial transport of Lithium-ion batteries by third parties is subject to the Dangerous Goods regulations. Transport preparation and transport are exclusively to be carried out by appropriately trained persons and the process has to be accompanied by corresponding experts.

When transporting batteries:

- Ensure that the battery contact terminals are protected and insulated to prevent short circuit.
- Ensure that the battery pack is secured against movement within packaging.
- Do not transport batteries that are cracked or leaking.
- Check with the forwarding company for further advice.

WORKING INSTRUCTIONS

Do not use excessive force when drilling or hammering. Let the product do the work for you.

VACLINK™

VACLINK™ is an integrated wireless dust control technology that allows a compatible product and a vacuum or dust extractor to connect to each other.

A signal from the product powers the dust extractor on and off. The product can only be connected to one dust extractor at a time.

NOTE: Other product's VACLINK™ functionality may differ. See the instructions provided with the compatible product for more information.

STATUS	VACLINK™ LED
Searching	Flashes green
Paired	Solid green
Unpaired	LED powers off
Paused	Flashes red, then powers off
Unpaused	Flashes green, then powers off

Pairing/Unpairing VACLINK™

1. Press and hold the pairing buttons on the product and dust extractor each for more than 1 second.
2. See the Troubleshooting table if the product and dust extractor do not pair successfully.
3. To unpair VACLINK™, press and hold the pairing button on the product for more than 1 second.

Using VACLINK™

1. Once paired, set up the dust extractor hose, work area, and job as needed, following the product and dust extractor instructions.
2. Power on the product. VACLINK™ automatically powers on the dust extractor.
3. Power off the product and the dust extractor automatically powers off within a few seconds.

Pausing VACLINK™

VACLINK™ can be paused to halt the connection.

NOTE: When the product's battery pack is removed and then reinstalled, the pause is cancelled and VACLINK™ will be active. To pause or unpair VACLINK™, quickly press and release the pairing button (less than 1 second).

TROUBLESHOOTING	
Pairing is unsuccessful.	Remove the battery pack from the product and power from the dust extractor for 1 minute. Retry the pairing procedure.
	Check that the dust extractor is in range of the product. Retry the pairing procedure.
	Move the product and dust extractor to an area with lower wireless traffic. Retry the pairing procedure.
	If VACLINK™ is still unable to pair, contact an authorised MILWAUKEE service centre.
The dust extractor does not turn on/off automatically.	VACLINK™ is paused on the product. Unpause VACLINK™.
	The dust extractor is not connected to a power supply. Connect the dust extractor to a power supply.
	The product and dust extractor are out of range of each other. Move the dust extractor and product closer.
	If VACLINK™ still does not power the dust extractor on or off, unpair and re-pair the product and dust extractor.
	If VACLINK™ still does not power the dust extractor on or off, contact an authorised MILWAUKEE service centre.

ONE-KEY™

To learn more about the ONE-KEY functionality for this product, refer to the Quick Start guide included with this product or go to www.milwaukeeetool.com/one-key. To download the ONE-KEY app, visit the App Store or Google Play from your smart device.

When the product experiences ESD, the speed LED shuts down and the product cannot adjust speed. The battery pack needs to be removed and reinserted to recover (see page 4).

In the event of a BLUETOOTH communication dropout outside of the exclusion band (2280 MHz–2603.5 MHz) due to radio frequency interference, the product needs to be reset manually to reestablish the link.

We considered the results to be within our minimum acceptable performance level according to EN 55014-2 / EN 301 489-1 / EN 301 489-17. The operation guidance will be given to the customer in the user manual.

ONE-KEY™ Indicator

Solid blue	Wireless mode is active and ready to be configured via the ONE-KEY™ app.
Blinking blue	The product is actively communicating with the ONE-KEY™ app.
Blinking red	The product is in security lockout and can be unlocked by the owner via the ONE-KEY™ app.

COLD WEATHER OPERATION

If the product is stored for a long period of time or at cold temperatures, the lubrication may become stiff, and the product may not work initially or work at full power. If this happens:

1. Insert a bit or chisel into the product.
2. Run the product against a scrap piece of material.
3. Pull and release the trigger every few seconds.

After 15 seconds to 2 minutes, the product will start working normally. The colder the product is, the longer it will take to warm up.

AUTOSTOP™

The AUTOSTOP™ kickback feature senses a bind of the drill. The control lamp flashes and the electronics powers off the product. To power on the product, release the trigger and press it again.

AUTOSTOP™ control sensitivity

NOTE: The sensitivity of the AUTOSTOP™ function can be adjusted but it cannot be disabled on the product.

To set the sensitivity on the product:

1. Remove the accessories and their fasteners, such as nuts or flanges from the product.
2. Push the control switch to the center position.
3. Pull the trigger 5 times.

Low - AUTOSTOP™ LED blinks 2 times.

Normal - AUTOSTOP™ LED blinks 4 times.

NOTE: Removing the battery pack automatically sets the sensitivity to normal.

Periodically test the AUTOSTOP™ function:

1. Remove the accessories from the product.
2. Keep a safe distance away from objects and people.
3. Firmly grasp the product's handles.

4. Hold the product away from the body.
5. Start the product.
6. Quickly rotate the product about 90° in any direction.
7. If the AUTOSTOP™ function is working, the product powers off and the AUTOSTOP™ indicator LED flashes.
8. If the AUTOSTOP™ function is not working, the product will continue running. Repeat the test. If the product will not automatically power off, return the product to the nearest authorised service centre.

MAINTENANCE

Never work with a product that needs repair.

Keep the product in good condition by adopting a regular maintenance program. Inspect the product for issues, such as undue noise, misalignment or binding of moving parts, breakage of parts, or any other condition that may affect the operation of the product. Return the product to a MILWAUKEE service centre for repair.

Keep the ventilation slots of the product clear at all times. Use only MILWAUKEE accessories and spare parts. Should components that have not been described need to be replaced, contact one of our MILWAUKEE service agents (see our list of guarantee/service addresses).

If needed, an exploded view of the product can be ordered. State the product type and the serial number printed on the label, and order the drawing at your local service agent or directly at: Techtronic Industries GmbH, Max-Eyth-Straße 10, 71364 Winnenden, Germany.

SYMBOLS



Read the instructions carefully before starting the product.



CAUTION! WARNING! DANGER!



Remove the battery pack before starting any work on the product.



Do not swallow the coin cell battery.



Always wear goggles when using the product.



Wear ear protectors.



Wear a suitable dust protection mask.



Wear gloves.



The anti-vibration system reduces product vibrations on the handle.



Accessory - Not included in standard equipment, available as an accessory.



Do not dispose of waste batteries, waste electrical and electronic equipment as unsorted municipal waste. Waste batteries and waste electrical and electronic equipment must be collected separately. Waste batteries, waste accumulators, and light sources have to be removed from the equipment. Check with your local authority or retailer for recycling advice and collection point. According to local regulations, retailers may have an obligation to take back waste batteries and waste electrical and electronic equipment free of charge. Your contribution to the reuse and recycling of waste batteries and waste electrical and electronic equipment helps to reduce the demand of raw materials. Waste batteries, in particular containing lithium, and waste electrical and electronic equipment contain valuable and recyclable materials, which can adversely impact the environment and the human health if not disposed of in an environmentally compatible manner. Delete personal data from waste equipment, if any.

n_0	No-load speed
V	Voltage
	Direct current
	European Conformity Mark
	British Conformity Mark
	Ukraine Conformity Mark
	EurAsian Conformity Mark

EC-DECLARATION OF CONFORMITY

We declare as the manufacturer under our sole responsibility that the product described under Technical Data fulfills all the relevant provisions of the following European Directives, European Regulations and harmonised standards.

2011/65/EU (RoHS)
2014/53/EU
2006/42/EC

EN 62841-1:2015+A11:2022
EN IEC 62841-2-6:2020+A11:2020
EN IEC 63000:2018
EN IEC 55014-1:2021
EN IEC 55014-2:2021
EN 301 489-1 V2.2.3
EN 301 489-17 V3.3.1
EN 300 328 V2.2.2
EN 62479:2010

Winnenden, 2025-09-01

Martin Landherr
Managing Director

Authorised to compile the technical file.

GB-DECLARATION OF CONFORMITY

We declare as the manufacturer under our sole responsibility that the product described under Technical Data fulfills all the relevant provisions of the following European Directives, European Regulations and harmonised standards.

S.I. 2008/1597 (as amended)
S.I. 2017/1206 (as amended)
S.I. 2012/3032 (as amended)

EN 62841-1:2015+A11:2022
EN IEC 62841-2-6:2020+A11:2020
EN IEC 63000:2018
EN IEC 55014-1:2021
EN IEC 55014-2:2021
EN 301 489-1 V2.2.3
EN 301 489-17 V3.3.1
EN 300 328 V2.2.2
EN 62479:2010

Winnenden, 2025-09-01



Martin Landherr
Managing Director

Authorised to compile the technical file.

Techtronic Industries (UK) Ltd.
Parkway
Marlow SL7 1YL
UK

Techtronic Industries GmbH
Max-Eyth-Straße 10,
71364 Winnenden,
Germany

Copyright 2025
Techtronic Industries GmbH
Max-Eyth-Straße 10
71364 Winnenden
Germany
+49 (0) 7195-12-0
www.milwaukeeetool.eu

Techtronic Industries (UK) Ltd
Parkway
Marlow SL7 1YL
UK

(07.25)
4100 4892 09
961015978-01A