

G-PLUS

RECHARGEABLE BATTERY.

(for G Plus Mini Polishing Machines and Denibber)

MANUAL

SPECIFICATIONS

Part number	GPT125
Input	10.8 V 2.5 Ah, 27 Wh



WARNING

PLEASE READ ALL INSTRUCTIONS THOROUGHLY. To reduce the risk of injury, users must read and understand this manual. Failure to follow all instructions listed below, may result in electric shock, fire and/or serious personal injury.

SYMBOLLOGY



Before switching on the power tool, read the operating manual



Improper use may result in risk of electric shock



Do not expose batteries to fire as there is a risk of explosion



Do not expose your battery pack or charger to rain or other liquids, keep it dry at all times



Store your polisher and batteries inside



Only charge batteries at temperatures between 4°C to 40 °C. Protect the battery from excessive heat, and from continuous exposure to sunlight



Do not dispose of power tools, chargers or batteries in domestic waste. Power tools, chargers and batteries must be collected and recycled in accordance with the Waste Electrical and Electronic Equipment Directive

STORAGE AND MAINTENANCE

- Remove batteries from charger or your polisher when not in use.
- When a battery is not in use, keep it away from other metal objects, especially small metal objects such as paper clips, coins, keys, nails, and that can make a connection from one terminal to another. Shorting the battery terminals together may cause burns or fire.
- Store your battery pack in a cool, dry place.

WARNING

To reduce the risk of injury, always remove the battery from the charger or tools before performing any maintenance. Never disassemble the battery. Contact a service facility for ALL repairs.

- Clean out dust and debris from battery pack vents and electrical contacts by blowing with compressed air.
- Remove dirt and dust from the housing with a paint brush or dry cloth, keeping away from all electrical contacts.
- Never use flammable or combustible solvents around batteries, charger, or tools.
- Never immerse your battery or charger in liquid or allow a liquid to flow into the housing.
- Reduced operating times after recharging indicates that the battery is worn out. The battery must be replaced.
- Follow the steps for charging the battery in the operating instructions for your polisher and the battery charger.

SAVE THESE INSTRUCTIONS

1. SAVE THESE INSTRUCTIONS - THIS OPERATOR'S MANUAL CONTAINS IMPORTANT SAFETY AND OPERATING INSTRUCTIONS FOR FARÉCLA LI-ION BATTERIES AND THE FARÉCLA LI-ION CHARGER.
2. BEFORE USING THE BATTERY PACK AND CHARGER, READ THIS OPERATOR'S MANUAL, YOUR POLSIHER MANUAL, AND ALL LABELS ON THE BATTERY, CHARGER AND POLISHER.
3. TO REDUCE THE RISK OF INJURY, CHARGE LITHIUM-ION BATTERIES ONLY IN THEIR FARÉCLA LITHIUM-ION CHARGER. Other types of chargers may cause personal injury or damage. Do not wire a battery to a power supply plug or car cigarette lighter. Batteries will be permanently disabled or damaged.
4. USE FARÉCLA LITHIUM-ION PACKS ONLY ON COMPATIBLE FARÉCLA LITHIUM-ION POLISHERS. Use with other devices may result in a risk of fire, electric shock or personal injury.
5. AVOID DANGEROUS ENVIRONMENTS. Do not charge batteries in rain, snow, damp or wet locations. Do not use batteries or chargers in explosive atmospheres (gaseous fumes, dust or flammable materials) as sparks may be generated when inserting or removing batteries, possibly causing fire.
6. CHARGE IN A WELL VENTILATED AREA. Do not block charger vents. Keep them clear to allow proper ventilation. Do not allow smoking or open flames near a charging battery pack. Vented gases may explode.
7. DO NOT BURN OR INCINERATE BATTERIES. Batteries may explode, causing personal injury or damage. Toxic fumes and materials are created when battery packs are burned.
8. DO NOT CRUSH, DROP, OR DAMAGE BATTERIES. Do not use a battery or charger that has received a sharp blow, been dropped, run over, or damaged in any way (e.g., pierced with a nail, hit with a hammer, stepped on).
9. DO NOT DISASSEMBLE. Incorrect reassembly may result in the risk of electric shock, fire or exposure to battery chemicals. If it is damaged, take it to a FARÉCLA service facility.
10. BATTERY CHEMICALS CAUSE SERIOUS BURNS. Never allow contact with skin, eyes, or mouth. If a damaged battery pack leaks battery chemicals, use protective gloves to dispose of it. If skin is exposed to battery fluids, wash with soap and water and rinse with vinegar. If eyes are exposed to battery chemicals, immediately flush with water for 20 minutes and seek medical attention. Remove and dispose of contaminated clothing.
11. DO NOT SHORT CIRCUIT. A battery will short circuit if a metal object makes a connection between the positive and negative contacts on the battery. Do not place a battery near anything that may cause a short circuit, such as coins, keys or nails in your pocket. Do not allow fluids to flow into battery pack. Corrosive or conductive fluids, such as seawater, certain industrial chemicals, and bleach or bleach-containing products, etc., can cause a short circuit. A short circuited battery pack may cause fire, personal injury, and product damage.
12. STORE YOUR BATTERY PACK AND CHARGER IN A COOL, DRY PLACE. Do not store batteries where temperatures may exceed 40°C such as in direct sunlight, a vehicle or metal building during the summer.
13. THIS BATTERY IS NOT INTENDED FOR USE BY CHILDREN AND PERSONS WITH PHYSICAL, SENSORY OR MENTAL LIMITATIONS OR A LACK OF EXPERIENCE OR KNOWLEDGE.

WHEN TO CHARGE THE BATTERY

- Always fully charge a battery before first use.
- Remove the battery from the tool for charging. Li-ion batteries do not develop a "memory" when charged after a partial discharge. It is therefore unnecessary to run down the battery pack fully before placing it in the charger.
- Batteries left unused need to be charged every 3 months
- A battery that has not been charged for a long period of time may enter into a "sleep" status due to the gradual reduction of voltage, and your charger may not be able to reactivate it. Such batteries need to be sent to a service centre to be reactivated with specialised equipment. There is no guarantee of reactivation.

EXEMPTION FROM LIABILITY

Farécla Products Ltd are not liable for any damage and lost profit due to interruption in business caused by the product or by an unusable product.

Farécla Products Ltd are not liable for any damage caused by improper use of tools or by use of your tool with other manufacturers' products.

Authorised Distributor

Farécla Products Ltd, Broadmeads, Ware, Hertfordshire, SG12 9HS, UK
enquiries@farecla.com | www.farecla.com | +44 (0)1920 465 041

G PLUS MINI POLISHER RANGE

GPT020 G Plus Rotary Mini Polisher

GPT220 G Plus Dual Action Mini Polisher

GPT320 G Plus Denibber Tool

GPT125 G Plus Rechargeable Battery for GPT020 - GPT220 - GPT320

GPT126 G Plus Mini Battery Charger for GPT125



fareclaproductsltd

Farécla | SURFACE FINISHING
SPECIALISTS